


SPRING-LOADED ANTIVIBRATION MOUNT SIF-AF

- o The **SIF-AF** antivibration mounts are used for attenuation of noise and vibration generated by ventilation equipment. The antivibration mounts reduce dynamic loads, increase reliability and durability of ventilation equipment.
- o **Four antivibration mounts are required to complete one fan.**

| Model | Load [kg] | Dimensions and mounting holes [mm] | | | | |
|----------|-----------|------------------------------------|-----|----|------|-------|
| | | L | H | C | Ød | Width |
| SIF-AF-1 | 7 | 105 | 70 | 82 | 10.5 | 58 |
| SIF-AF-2 | 15 | 105 | 70 | 82 | 10.5 | 58 |
| SIF-AF-3 | 24 | 105 | 80 | 82 | 10.5 | 58 |
| SIF-AF-4 | 29 | 105 | 90 | 82 | 10.5 | 58 |
| SIF-AF-5 | 35 | 105 | 113 | 82 | 10.5 | 58 |
| SIF-AF-6 | 50 | 105 | 113 | 82 | 10.5 | 58 |
| SIF-AF-7 | 80 | 105 | 113 | 82 | 10.5 | 58 |
| SIF-AF-8 | 120 | 105 | 113 | 82 | 10.5 | 58 |

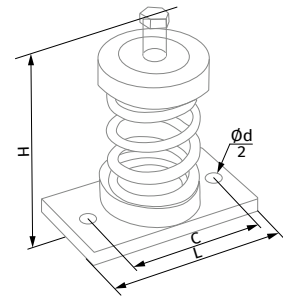

RUBBER ANTIVIBRATION MOUNT SIG-AF

- o The rubber antivibration mounts **SIG-AF** are used for attenuation of noise and vibration generated by ventilation equipment.
- o The antivibration mounts reduce dynamic loads, increase reliability and durability of ventilation equipment.
- o **Four antivibration mounts are required to complete one fan.**

| Model | Load [kg] | Dimensions and mounting holes [mm] | | | | | | |
|----------|-----------|------------------------------------|-----|----|----|----|-----|----|
| | | A | B | C | Ød | ØE | L | H |
| SIG-AF-1 | 5-35 | 5 | M8 | 60 | 9 | 30 | 80 | 40 |
| SIG-AF-2 | 35-80 | 10 | M10 | 76 | 11 | 40 | 105 | 52 |
| SIG-AF-3 | 50-120 | 10 | M10 | 76 | 11 | 45 | 105 | 52 |

